Model Name Switch-M16eGi
Model No. PN28160i-TH

Product Specification

401-28160i-TH-SP03

Page 1 of 13

1. Summary

Switch-M16eGi is an all Giga bit Ethernet Switch with management function having 14 ports of 10/100/1000BASE-T and two pairs of 10/100/1000BASE-T port and SFP extension slot, one of which is selectable.

2. Feature

- (1) Has wire speed layer 2 switching functions.
- (2) Ports 1 to 14 are auto negotiation—ready 10/100/1000BASE—T ports. Their speed and communication mode can be changed by configuration. Ports 15 and 16 can be used as a 10/100/1000BASE—T port corresponding to autonegotiation or an SFP extension slot exclusively. Also their speed and communication mode can be switched by configuration.
- (3) All twisted pair ports support straight/cross cable auto sensing function. Simply connect devices with straight cables, whether it is a terminal or a network device. (This function does not work if the port communication configuration is set at Fixed or Link Aggregation. Ports 1 to 14 are set at MDI-X. (default))
- (4) Due to the loop detection/shutoff function, a port where loop has occurred can be automatically shut off to prevent loop failures. When a port is shut off and recovered automatically, SNMP trap can be sent to notify the incident to the administrator. Moreover, the port with a loop can be identified by loop notification on the LEDs on the main unit and referring the history of loop on the setting screen.
- (5) Has a loop detection history function, which notifies when a loop occurs with the corresponding LED and enables a network administrator to identify the looped port after the loop is removed.
- (6) Fanless design solves noise problem or fan failure.
- (7) Power consumption can be suppressed by switching off the port LEDs (left) via the ECO mode LED functions.
- (8) VLAN function allows free grouping of up to 256 VLANs.
- (9) The IEEE802.1p compatible QoS function is supported.
- (10) Has an Internet Mansion function, which ensures security between each door.
- (11) Has a port grouping function, which groups ports that are allowed to communicate with one another to limit communications between different groups.
- (12) Equipped with energy efficient Ethernet (EEE) conforming to IEEE802.3az(LPI). When there is no data transmission at link up, the energy-saving state automatically starts so that power consumption can be reduced on each port. Factory default: Disable
- (13) Embedded power saving mode detects the connection status automatically and saves power consumption to minimum. Factory default: Disable
- (14) IEEE802.1Q VLAN tagging is supported, and a maximum of 256 VLANs can be registered.
- (15) The IEEE802.1X compatible user authentication function (EAP-MD5/TLS/PEAP) is supported.
- (16) Each single port supports IEEE 802.1X, Web, and MAC authentication protocols, eliminating the need for individually setting the ports' authentication parameters.
- (17) Supports ZEQUO assist Plus. Processes from introduction to maintenance can be performed easily.

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name	Switch-M16eGi
Model	PN28160i-TH

401-28160i-TH-SP03

Page 2 of 13

3. Rated/Environmental Conditions

3-1. Power supply	AC100-240V, 50/60Hz, 0.5A (with a built-in power supply)	
3-2. Power consumption	Normally, Max: 11.6W, Min: 4.8W	
3-3. Operating environment	Temperature: 0 - 60°C Humidity: 20 - 80%RH (no condensation)	
3-4. Storage environment	Temperature: -20 - 70°C Humidity: 10 - 90%RH (no condensation)	
3-5. EMC compliance	Humidity: 10 - 90%RH (no condensation) CISPR 22 Class A EN 55022 Class A AS/NZS CISPR22 Class A VCCI Class A EN 61000-3-2, EN 61000-3-3 CISPR 24 EN 55024 IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-6, IEC 61000-4-8, IEC 61000-4-11	
3-6. Safety compliance	IEC 62368-1 EN 62368-1	
3-7. Environment compliance	RoHS compliant	

4. Form

2	4-1. Form and materials/colors	Dimensions Case material Color	:44mm (Height) ×330mm (Width) ×230mm (Depth) (Excluding protruding sections) :SECC : Main unit: Green 03, Front face: Black 03, Face plate label: Black 04
4	4-2. Mass (Weight)	2,200g	

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name	Switch-M16eGi
Model	PN28160i-TH

401-28160i-TH-SP03

Page 3 of 13

5. Hardware Specifications

5-1. Interface	Twisted pair port 1-16	:RJ45 connector (*1)	
	Transmitting and receiving netwo	ork system: IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX IEEE802.3ab 1000BASE-T	
	Energy Efficient Ethernet (*2) Transmission speed	:IEEE802.3ab 1000BASE-1 :IEEE802.3az (LPI) :10/100Mbps, full/half duplex :1000Mbps, full duplex	
	Compatible cable	:Twisted pair cable (At least equivalent to EIA/TIA568 category 5e)	
	Maximum transmission distance Auto-Negotiation	: 100m : Communication speed and full/half duplex are automatically recognized. The setting can be fixed to 10Mbps, 100Mbps, and full duplex or half duplex.	
	*1 Embedded power saving mode do and saves power consumption to Factory default : Disable	etects the connection status automatically minimum.	
		conforming to IEEE802.3az (LPI). ion at link up, the energy-saving state er consumption can be reduced on each port.	
	SFP extension slots 15,16 Transmitting and receiving network	system: :IEEE802.3z 1000BASE-SX/LX	
	SFF-8472 (DMI: Diagnostic Monitoring Interface) *Select either of RJ45 or SFP for use		
	Optional Accessories	:1000BASE-SX SFP Module(i) (PN54022-TH) 1000BASE-LX SFP Module(i) (PN54024-TH)	
5-2. Switching mode	Switching method Switching capacity Packet transfer capability	:Store and Forward :32Gbps :Non-blocking Max 1,488,000pps/port(1000Mbps) Max 148,800pps/port(100Mbps)	
	MAC Address table Buffer memory Flow control	Max 14,880pps/port (10Mbps) :Max 8K entry/unit :512K Bytes/unit :half-duplex Back pressure full-duplex IEEE802.3x	
	Aging timeout Jumbo frame supported Transmittable frames HOL Blocking Prevention	:10 to 100,000 sec. (Default: 300 sec.) :9KB :EAP,BPDU :Support	
5-3. Terminal emulator connection	Console port Transmission mode Emulation mode Communication configuration	:RJ45 connector 1 port :RS-232C (ITU-TS V.24) :VT100 :9,600bps, 8bit, None Parity control, Stop bit 1 bit	


Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name	Switch-M16eGi
Model	PN28160i-TH

401-28160i-TH-SP03

Page 4 of 13

5. Hardware Specifications

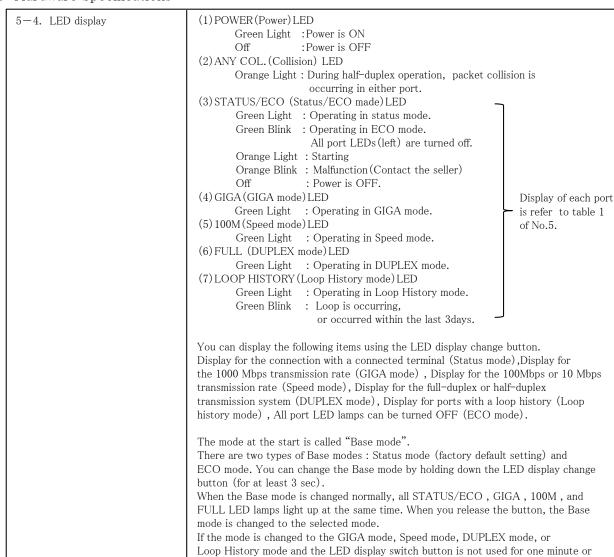

The Base mode is maintained even after the power is turned OFF.

Panasonic
Switch-M16eGi
OFF-LGMP
ANY COLD
STATUS/ECO
1000M
FULL
LOOP HISTORY

LED display change button

longer, the mode automatically returns to a Base mode (Status mode or ECO mode).

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022


Panasonic Electric Works Networks Co., Ltd.

Model Name	Switch-M16eGi
Model No.	PN28160i-TH

401-28160i-TH-SP03

Page 5 of 13

5. Hardware Specifications

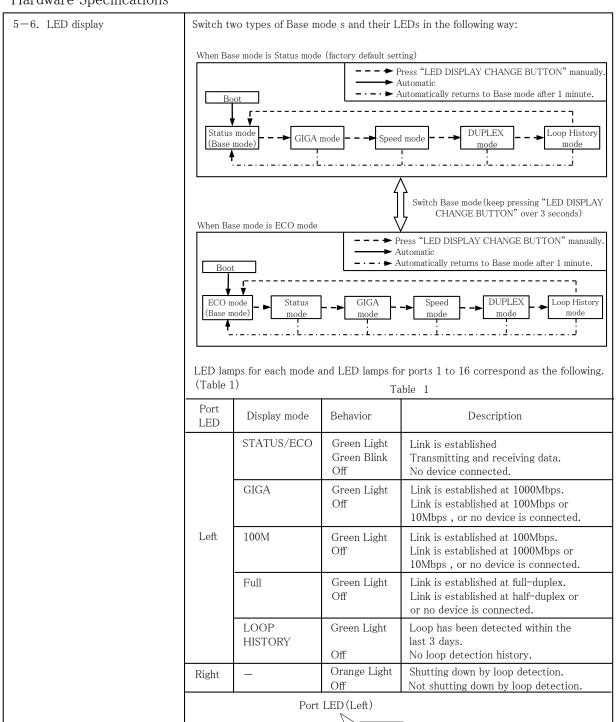

Port 1-16 corresponding to the Auto MDI / MDI-X (Allowed change by the setting for the application)
Ports 1-14 are set to "Disable" at factory default setting.

Fan-less

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

5-5. Cascade connections

5-6. Fan

Panasonic Electric Works Networks Co., Ltd.

Port LED (Right)

Model Name	Switch-M16eGi
Model No	PN28160i-TH

401-28160i-TH-SP03

Page 6 of 13

6. Software Specifications

6-1. Configuration	Control parameters can be set by the following procedures: (1) Configuration from an asynchronous terminal connected to the console port. (2) Configuration from a remote terminal connected via TELNET and SSH (3) It can be set from a remote terminal according to the Web screen.		
6-2. Ethernet Switch Control	It is possible to check the control and operation of the Ethernet Switch by ZEQUO assist Plus. Ethernet Switch can be controlled by the following procedures: (1) Control from an asynchronous terminal connected to the console port. (2) Control from a remote terminal using SSH/TELNET and TCP/IP network connection (3) Control using SNMP Manager The Ethernet Switch operation status can be checked using the following functions. (1) Function to display the CPU (2) SFP module status checking function (DDM: Digital Diagnostic Monitoring)		
6-3. Rebooting	The system can be reset from the soft (1) Warm start (2) Reset to factory default (3) Reset items other than the IP at The reboot timer function can also be	ddress to factory defau	
6-4. Supported Agent	Management protocol Data transfer protocol	:SNMP v1/v2c/v3 TELNET SSH v2 SNTP v3 :TFTP	(RFC1157,RFC1901, RFC1908) (RFC854) (RFC4251,RFC4252, RFC4253,RFC4254) (RFC1769) (RFC783,RFC1350)
6-5. Supported MIB	RFC1213-MIB (MIB II) BRIDGE-MIB SNMPv2-MIB RMON-MIB SNMP-FRAMEWORK-MIB SNMP-MPD-MIB SNMP-NOTIFICATION-MIB SNMP-TARGET-MIB SNMP-USER-BASED-SM-MIB SNMP-VIEW-BASED-ACM-MIB SNMP-COMMUNITY-MIB IP-MIB IF-MIB IEEE8021-PAE-MIB *1 Excluding following item At, ipRouteTable, icmp, egp *2 Excluding following item dot1dStp, dot1dSr, dot1dStatic *3 Excluding following item ipDefaultRouterTable, ipv6Rout	(RFC 2571) (RFC 2572) (RFC 2573N) (RFC 2573T) (RFC 2574) (RFC 2575) (RFC 2576) (RFC 4293) (*3) (RFC 2233) Excluding (IEEE802.1X) Excluding	etherStatsTable Iding IfMIB Iuding dot1xPaeSupplicant
6-6. System log	Maximum number to be kept: 256 System log transfer (IPv4/IPv6)		

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name	Switch-M16eGi
Model	PN28160i-TH

401-28160i-TH-SP03

Page 7 of 13

6. Software Specifications

6-7. Loop detection	Turns on the port LED with a orange light when a loop occurs in the corresponding port. At this time, the relevant port automatically shuts down to prevent loop from occurring. SNMP trap can be sent to notify the incident to the administrator. During loop is occurring, or if loop has occurred within the latest 3 days, LOOP HISTORY LED blinks to notify this. Loop detection port Enabled: Ports 1 to 14 (factory default setting) Disabled: Ports 15 and 16 (factory default setting) Enabled (factory default setting) Enabled/disabled can be switched by configuring a setting using the console, or by pressing "LED DISPLAY CHANGE BUTTON" for 10 seconds or more. The setting is kept even when the power is turned OFF. Loop shutoff time 60 to 86,400 sec. (Factory default setting: 60 sec.) The set time Port LED lights up orange and the port shuts off. Loop history retention time 3 days The LOOP HISTORY LED lamp flashes for three days.
	The Port LED lamp also remains lit for three days after the loop is eliminated. The Loop shutoff mode has the following 2 types of modes. Block mode (factory default setting) When loops are detected, the ports are blocked, and just the loop detection packets will be transmitted and received. Shutdown mode When loops are detected, the ports are shut down, and none of the packets including the loop detection packets will be transmitted nor received. (*) * Just the loop detection packets from 30 seconds before the set restoration times will automatically be transmitted and received.
6-8. Others	Syslog Client (Transfers system logs to the Syslog server.) TFTP Client (Upgrades the software and saves/loads configuration information.) Login RADIUS (login authentication function by the RADIUS server)

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name	Switch-M16eGi
Model No.	PN28160i-TH

401-28160i-TH-SP03

Page 8 of 13

7. Layer 2 Switching Functions

7—1. Port grouping	Members of the port group can communicate only among member ports in the same group. (Number of group registrations: 256)
7-2. VLAN	IEEE802.1Q Tag VLAN Protocol Port Base VLAN, Guest VLAN, Dynamic VLAN Number of VLAN registrations: 256 (including default) Internet Mansion function
7-3. Trunking	IEEE802.ad Link Aggregation function (STATIC) Up to 8 groups can be created (up to 8 ports per group).
7-4. Port Monitoring	Traffic of the target port can be copied to the specified port and transmitted. (Two or more target ports can be specified.)
7-5. QoS	IEEE802.1p 4 levels of Priority Queue supported (Strict priority queuing)
7—6. Authentication Function	IEEE802.1X Port-based authentication (EAP-MD5/TLS/PEAP Authentication method) Web-based authentication, Mac-based authentication using IEEE 802.1X Web-based authentication, Dynamic VLAN function using IEEE 802.1X Guest VLAN using IEEE 802.1X Force Authorized MAC Address Configuration EAP Packet Forwarding function (Enable/disable EAP transmission can be specified for each port.) MAC authentication WEB authentication Triple authentication * **IEEE802.1X MAC-based/MAC/WEB authentication can be simultaneously
7-7. Access control	Access control can be controlled by the following parameters: (1) IP address (Source or Destination) (2) IPv6 address (Source or Destination) (3) MAC address (Source or Destination) (4) TCP/UDP port number (Source or Destination) (5) VLAN ID (6) IEEE 802.1p Priority (7) DSCP (8) Protocol (9) ICMP type (10) TCP SYN Flag
7-8. Time configuration	SNTP-based time synchronization function Manual mode setting
7—9. Others	FDB ARP table NDP table DDM (Digital Diagnostic Monitoring) Reboot (Normal/Default/Default-exceptIP) Statics IPv4 Ping Execution IPv6 Ping Execution Watch Dog Timer

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name Switch-M16eGi Model No. PN28160i-TH

Product Specification


401-28160i-TH-SP03

Page 9 of 13

8. Web management function

8-1. Software specification		
8-1-1. Enabled browser	Microsoft Internet Explorer 11	
8-2. Setting function		
8-2-1. Switching configuration	Administration IP Port (basic, extend, Power saving) System security Syslog transmission ID/Password Static ARP table VLAN seting QoS setting 802.1X Access Control	Link aggregation Storm control Port monitoring Static multicast address Port group System log Exception handler Watchdog Timer setting Loop detection and shutoff DDM
8-2-2. Time setting	Time setting SNTP setting, manual setting	
8-3. Monitoring function		
8-3-1. Basic information	System information, Hardware information, Management information[Host name (sysName)], System address information	
8-3-2. Learning and recording information	FDB table, ARP table, Statistics, System log	
8-4. System management Software upgrade, Reboot, Save current config, file transfer, Ping execution		

9. Connector Pin Arrangement

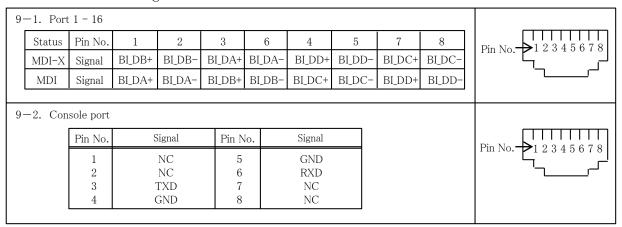

10. Installation Procedures and Accessories

10-1. Installation Procedures	(1) Mounting to wall (2) Mounting to rack	
10-2. Accessories	 Installation Guide (Eniglsh) Installation Guide (Thai) Rubber foot Wall mount bracket Screw (for fixing the wall mount brackets to the Ethernet Switch) Rack mount bracket (for 19-inch rack) Screw (for 19-inch rack) Screw (for fixing the mount brackets to the Ethernet Switch) Power cord (BS1363) (*) * The attached power cord is dedicated for AC 100 - 240 V use. 	:1 :1 :4 :2 :8 :2 :4 :8 :1

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Panasonic Electric Works Networks Co., Ltd.

Model Name	Switch-M16eGi	D 1 + 0 'C +'	401-28160i-TH-SP03
Model No.	PN28160i-TH	Product Specification	Page 10 of 13

11. Optional Accessories

11-1. 1000BASE-SX	Fiber optic port connector type: LC connector (Duplex)	
SFP Module (i)	Standards	:IEEE802.3z 1000BASE-SX
(Model No.:PN54022-TH)	Transmission speed	:1000Mbps, full duplex
	Compatible cable	:Fiber cable
		50/125μm Multi Mode Fiber
		$62.5/125\mu$ m Multi Mode Fiber
	Maximum transmission distance	:550 m at 50/125 μ m
		220 m at 62.5/125 μ m
11-2. 1000BASE-LX Fiber optic port connector type: LC connector (Duplex)		connector (Duplex)
SFP Module (i)	Standards	:IEEE802.3z 1000BASE-LX
(Model No.:PN54024-TH)	Transmission speed	:1000Mbps, full duplex
	Compatible cable	:Fiber cable
		10/125μm Single Mode Fiber
		50/125 μ m Multi Mode Fiber
		$62.5/125 \mu$ m Multi Mode Fiber
	Maximum transmission distance	:10 km when Single Mode Fiber is used
	Transman or anomiobron diovario	110 km when bingle wode i ber is used

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022

Model Name Switch-M16eGi
Model No. PN28160i-TH Product

Product Specification

401-28160i-TH-SP03

Page 11 of 13

12. Prohibitions when Using the Product to Guarantee Safety

Denotes that "Death or serious injuries might be sustained".

The manufacturer assumes no responsibility for any problems occurring when the following conditions are not satisfied. Observe the following items when using the product.

- Do not use power supply other than AC 100 240 V.
 Deviation could lead to fire, electric shock, and/or equipment failure.
- (2) Do not handle this Ethernet Switch and connection cables during a thunderstorm. Deviation could lead to electric shock.
- (3) Do not disassemble and/or modify this Ethernet Switch. Deviation could lead to fire, electric shock, and/or equipment failure.
- (4) Do not damage the power cord. Do not bend too tightly, stretch, twist, bundle with other cord, pinch, put under a heavy object and/or heat it.
 Damaged power cord could lead to fire, and/or electric shock.
- (5) Do not handle the power cord with wet hand.

 Deviation could lead to electrical shock, and/or equipment failure.
- (6) Do not insert, nor drop foreign objects such as metal or combustible things into the inside from the openings or twisted pair ports.

Deviation could lead to fire, electric shock, and/or equipment failure.

- (7) Do not store or use the Ethernet Switch in places where it might get splashed with liquids such as water, in places with a lot of humidity, in places with conductive dust, or in places where there are corrosive and combustible gases.
 Deviation could lead to fire, electrical shock, and/or equipment failure.
- (8) Do not place this Ethernet Switch under direct sunlight and/or high temperature. Deviation could lead to high internal temperature and fire.
- (9) Do not install this Ethernet Switch at the location with continuous vibration or strong shock, or at the unstable location. Deviation could lead to falling, injury and/or equipment failure.
- (10) Do not put this Ethernet Switch into fire.
 Deviation could lead to explosion and/or fire.
- (11) If the device is going to be used in high temperature environments, do not perform the following operations with bare hands.
 - Relocating the installation area, transporting, and attaching, and removing attachment brackets, etc.
 - Connecting and disconnecting twisted pair cables, fiber optic cables, SFP modules and console cables
 - Attaching, and removing power cords
 - Operating LED display change buttons

Deviation could lead to injuries or burns, etc. because of high temperatures.

(12) Do not connect equipments other than 10BASE-T/100BASE-TX/1000BASE-T to twisted pair port.

When connecting to a 10BASE-T device, use a Cat5 or above cable.

Deviation could lead to equipment failure.

- (13) Do not insert any other modules into the SFP extension slots (ports 15 and 16) except for our optional SFP modules (PN54022/PN54024).
 Deviation could lead to equipment failure. Check our website for the latest information on supported SFP modules.
- (14) Do not connect the console ports with any other console cables except for our optional PN72001 RJ45-DSub 9-pin

Deviation could lead to fire, electrical shock, and/or equipment failure.

Date issued	Oct. 01, 2019	Panasonic Electric Works Networks Co., Ltd.
Date revised	Apr. 01, 2022	

13. Cautions when Using the Product to Guarantee Safety

Denotes that "Minor injuries might be sustained, or property damage might occur".

The manufacturer assumes no responsibility for any problems occurring when the following conditions are not satisfied. Observe the following items when using the product.

(1) Use the bundled power cord (AC 100 - 240 V specifications). Deviation could lead to electric shock, malfunction, and/or equipment failure.

(2) Unplug the power cord in case of equipment failure. Deviation, such as keeping connected for a long time, could lead to fire.

(3) Be sure to connect the ground cable.

Otherwise this might cause electrical shocks, misoperations and malfunctions.

Connect the Ethernet Switch via the supplied power cord to the outlet which is connected to the ground.

If the outlet is not connected to a ground, connect the ground cable (AWG18:green/yellow) to the ground terminal screw.

- (4) Connect the power cord firmly to the power port. Deviation could lead to electric fire, shock, and/or malfunction.
- (5) If the STATUS (Status) LED blinks orange, unplug the power cord since this is a malfunction. Deviation, such as keeping connected for a long time, could lead to fire.
- (6) Handle the Ethernet Switch carefully so that fingers or hands may not be damaged by twisted pair port, SFP extension slot, console port, or power cord hook block.
- (7) Check whether the optical fiber cable connectors are contaminated with dust, etc.

 This might cause the optical signal to not be transmitted normally, and cause misoperations and malfunctions. If they are contaminated, make sure to clean them off, then connect them to the optical fiber ports.
- (8) This Ethernet Switch is to be periodically serviced in order to maintain its performance.

 Please choose a product administrator, and have them be sure to implement periodic maintenance. When doing maintenance, check the inspection chart that is posted on our website which has the requisite items listed on it.
- (9) When using this Ethernet Switch to design systems, use it after applying appropriate measures such as setting up redundant configurations.

Communications failures might be generated due to causes such as malfunctions or misoperations while the Ethernet Switch is being used.

(10) When using this Ethernet Switch for applications which require extremely high reliability, be careful to expend all possible means to ensure safety and reliability.

This Ethernet Switch was not designed nor manufactured with the intention that it be used for applications (in use with railways, aviation, and medical care, etc. whereas the influence rate due to communications failures is extremely high in regard to systems that directly affect systems and human lives) which require extremely high reliability.

- (11) Be aware of glitches which are caused in the usage environments such as age-related degradation, etc.

 This may vary depending upon conditions such as utilisation rates and usage environments, but performance might decrease due to the age-related degradation, etc. of components. It is recommended that this Ethernet Switch be replaced about five years after it has been installed.
- (12) Be careful in regards to environmental restrictions whereby the Ethernet Switch can be used.

 Please isolate the business power lines and communications lines. Isolate distribution lines and other distribution lines, and low current power lines, optical fiber cables, metallic water conduits, and gas conduits, etc. Noise may be generated in the communications lines which might cause communications glitches.
- (13) Be careful when performing the following operations since the device will be at high temperatures immediately after it has been energized or the power has been shut off.
 - Relocating the installation area, transporting, and attaching, and removing attachment brackets, etc.
 - Connecting and disconnecting twisted pair cables, fiber optic cables, SFP modules and console cables
 - Attaching, and removing power cords
 - Operating LED display change buttons

Deviation could lead to injuries or burns, etc. because of high temperatures.

Date issued	Oct. 01, 2019	Panasonic Electric Works Networks Co., Ltd.
Date revised	Apr. 01, 2022	

Model Name	Switch-M16eGi
Model	PN28160i-TH

401-28160i-TH-SP03

Page 13 of 13

14. Basic Instructions for the Use of This Product

- (1) For inspection and/or diagnosis, consult the shop.
- (2) Use commercial power supply from a wall socket, which is close and easily accessible to this Ethernet Switch.
- (3) Unplug the power cord when installing or moving this Ethernet Switch.
- (4) Unplug the power cord when cleaning this Ethernet Switch.
- (5) Use this Ethernet Switch within the specifications. Deviation could lead to malfunction.
- (6) Do not touch the twisted pair cable modular metal terminals which are connected to RJ45 connectors (twisted pair ports) or the connectors, nor place them near electrically-charged objects. Static electricity could lead to equipment failure.
- (7) Do not put the modular plug of the connected twisted pair cable on objects that can carry static charge, such as carpet. Do not place it in the proximity. Static electricity could lead to equipment failure.
- (8) Do not put a strong shock, including dropping, to this Ethernet Switch. Deviation could lead to equipment failure.
- (9) Before connecting a console cable to the console port, discharge static electricity, for example by touching metal appliance (do not discharge by touching this Ethernet Switch).
- (10) Do not store and/or use this Ethernet Switch in the environment with the characteristics listed below. (Store and/or use this Ethernet Switch in the environment in accordance with the specification.)
 - High humidity. Possible spilled liquid (water).
 - Dusty. Possible static charge (such as carpet).
 - Under direct sunlight.
 - Possible condensation. High/low temperature exceeding the specifications environment.
 - Strong vibration and/or strong shock.
- (11) Please use this Ethernet Switch in place where ambient temperature is from 0 to 60°C. Failure to satisfy the conditions above may result in a fire, electric shock, equipment failure, and/or malfunction. Such events are not covered by the warranty.
- (12) Do not block the ventilator of the Ethernet Switch. Blocked ventilator induces the heat accumulation inside, causing equipment failure and/or malfunction.
- (13) If any module other than the optional SFP extension modules(PN54022/PN54024) is inserted into the SFP extension slot, operation is not guaranteed. For the latest information about compatible SFP extension modules, check our website.
- (14) When using two Ethernet Switches, do not stack them. When you place them side by side, allow for a space of 20 mm or more between them.

Date issued	Oct. 01, 2019
Date revised	Apr. 01, 2022